

Heating

Daikin BRC1D52

How to show the actual room temperature in the office?

1. Press and hold button TEST until 00 Settings appears in the display
2. Release the button
3. Press and hold button TEST again until 40 is shown
4. Release the button
5. Now press the Temperature button UP, 40 should change to 41
6. Underneath 00 the current room temperature is shown, e.g. 19

Links

[Verkabelte Fernbedienung BRC1D528](#)

From:

<https://wiki.inf.unibz.it/> - **Engineering-Tech Wiki**

Permanent link:

https://wiki.inf.unibz.it/doku.php?id=public:heating_cooling&rev=1547629387

Last update: **2019/01/16 10:03**

