

Heating

Daikin BRC1D52

How to show the actual room temperature in the office?

1. Press and hold button TEST for more than 4 secs, until 00 Settings appears in the display
2. Release the button
3. Press and hold button TEST again for more than 4 secs, until 40 is shown in the display
4. Release the button
5. Now press the Temperature button UP, 40 should change to 41
6. Underneath 01 the current room temperature is shown, e.g. 26

[daikin-temperature-reading.mp4](#)

Links

<https://www.youtube.com/watch?v=JkIFtS7Iamg>Checking Temperature reading on the thermistor from the wired R/C for VRV/SKYAIR FCU.(BRC1C62)

[Verkabelte Fernbedienung BRC1D528](#)

From:

<https://wiki.inf.unibz.it/> - **Engineering-Tech Wiki**

Permanent link:

https://wiki.inf.unibz.it/doku.php?id=public:heating_cooling&rev=1623752267

Last update: **2021/06/15 12:17**

