

# Heating

Daikin BRC1D52

How to show the actual room temperature in the office?

1. Press and hold button TEST for more than 4 secs, until 00 Settings appears in the display
2. Release the button
3. Press and hold button TEST again for more than 4 secs, until 40 is shown in the display
4. Release the button
5. Now press the Temperature button UP, 40 should change to 41
6. Underneath 01 the current room temperature is shown, e.g. 26
7. Press and hold button TEST for more than 4 secs to return to main menu



[daikin-temperature-reading.mp4](#)

Links

<https://www.youtube.com/watch?v=JkIFtS7Iamg>Checking Temperature reading on the thermistor from

the wired R/C for VRV/SKYAIR FCU.(BRC1C62)

Verkabelte Fernbedienung BRC1D528

From:

<https://wiki.inf.unibz.it/> - **Engineering-Tech Wiki**

Permanent link:

[https://wiki.inf.unibz.it/doku.php?id=public:heating\\_cooling&rev=1623939214](https://wiki.inf.unibz.it/doku.php?id=public:heating_cooling&rev=1623939214)

Last update: **2021/06/17 16:13**

