

Installation Protocol SUPERMICRO SuperServer 6029P-TR/TRT

31/07/2019

Server: [SUPERMICRO SuperServer 6029P-TR/TRT](#),

Quick Reference Guide v1.0b

User`s Manual

Quick Specs: 96GB RAM, 2 x 10TB HDD, 2 x 480GB SSD, 2 x Ethernet ports, 1 x IPMI/ILO

BIOS Version:

Requirements

Hardware:

- Server
- Monitor (VGA)
- USB Keyboard

Software:

C) Ubuntu 18.04.2 LTS 64bit USB

Server is mounted in 19" Rack SU with 2 x Power Cables, 2 x Ethernet Cables and ILO Cable connected

Connect Monitor, Mouse and Keyboard at Backpanel

Logical Drives

The Server is already configured in the following way:

Install Ubuntu Server 18.04.2 LTS 64 bit

Reboot with USB-Stick connected!

Wait until

Set IP, NM, GW, DNS1, DNS2

```
Server Name: ismard\\
Domain: inf.unibz.it
User: CS-Tech Team
login: csadmin
password: *****
repeat: *****
No encrypted home
Yes timezone
```

```
/dev/sdb 161,1GB  /      #1 primary 83,9GB ntfs
                        #5 logical 69,2GB ext4
                        #6 logical 8,00GB swap
```

sdb5 / 69,2GB
sdb6 swap 8,0GB

x Install OpenSSH server

REBOOT

From:
<https://wiki.inf.unibz.it/> - Engineering-Tech Wiki

Permanent link:
https://wiki.inf.unibz.it/doku.php?id=public:installation_protocol_supermicro_superserver_6029p-tr-trt&rev=1564733872

Last update: 2019/08/02 10:17

